

KX-TD 7896 Cordless Setup Info

**All programs listed below must be checked or changed for
The KX-TD 7896 Cordless to work properly**

Handsfree Operation

**On KX-TA 308/624/824 Telephone System
Program 617 Wireless PT Port Assignment:
Set to “Not Connected”**

**On KX-TA 1232 Telephone System
Program 621 Cordless PITS (PT) Extension Port
Set to “No”**

**On KX-TD 816/1232 Telephone System
Program 621 Cordless PITS (PT) Extension Port
Set to “No”**

Paralleled Telephone

**On KX-TA 308/624/824 Telephone System
Program 610 Paralleled Telephone (Connection)
Set to “Disable”**

**On KX-TA 1232 and KX-TD 816/1232 Telephone System
On the cordless:
Press the Green Talk button
Dial 390
Press the Red PWR button**

Voicesonic.com

KX-TD 7896 Cordless Setup Info

Background Music

KX-TA-824 Telephone System
Program 626 BGM Control for APT
Set to “Disable”
KX-TAW / TDA Series
On the cordless:
Press the Green Talk button
Dial *7510
Press the Red PWR button

Doorphone Ringing Pattern is not available on the KX-TA 824

Program 706
Doorphone Ringing Pattern Selection:
Set all Doorphones to “Single”, “Double” or “Triple”

Select PBX Type: Default is set to TYPE 1

Type 1: Is for the following systems
KX-TA 624, 824, 1232, TAW 848 & ALL TDA (50,100,200)

Type 2: Is for the following systems
KX-TA-308, ALL KX-TD (308, 500,816,1232)

To change the PBX TYPE:
Press the Joystick Down
Select the Double Antenna Icon and press joystick Down
Select “PBX TYPE”
Select Correct type
Press the joystick Down

Voicesonic.com